

BENQ											
	T51	X	OK	OK	OK	OK	OK	OK	X	OK	T51
	M7	V	OK	OK	OK	OK	OK	OK	OK	OK	M7
	E72	X	OK	OK	OK	OK	OK	X	X	OK	E72
	T60	X	OK	OK	OK	OK	OK	OK	X	OK	T60
Black Berry(黑莓機)											
	8300	V	OK	OK	OK	OK	OK	OK	OK	OK	8300
	8120	V	OK	OK	OK	OK	OK	OK	OK	OK	8210
	9500 Storm	X	OK	OK	OK	OK	OK	X	OK	OK	9500 Storm
	8820										
	9700	V	OK	OK	OK	OK	OK	OK	OK	OK	9700
	9000	V	OK	OK	OK	OK	OK	OK	OK	OK	9000
	9105	V	OK	OK	OK	OK	OK	OK	OK	OK	9105
	8900	V	OK	OK	OK	OK	OK	OK	OK	OK	8900
	9860	V	OK	OK	OK	OK	OK	OK	OK	OK	9860
	Z10	V	OK	OK	OK	OK	OK	OK	OK	OK	Z10
	8520	V	OK	OK	OK	OK	OK	OK	OK	OK	8520
CHT											
	3000	X	OK	OK	OK	OK	OK	OK	X	OK	3000
	9100	V	OK	OK	OK	OK	OK	OK	OK	OK	9100
	5000	X	OK	OK	OK	OK	OK	OK	X	OK	5000
Google											
	Nexus One	X	OK	OK	OK	OK	OK	OK	X	OK	Nexus One
HTC											
	Touch	X	OK	OK	OK	OK	OK	OK	X	OK	Touch
	P3470	X	OK	OK	OK	OK	OK	OK	X	OK	P3470
	Touch-Dual	V	OK	OK	OK	OK	OK	OK	OK	OK	Touch-Dual
	NEXUS ONE	X	OK	OK	OK	OK	OK	X	X	OK	NEXUS ONE
	Legend	X	OK	OK	OK	OK	OK	OK	X	OK	Legend
	Wildfire	X	OK	OK	OK	OK	OK	OK	X	OK	Wildfire
	Tattoo	X	OK	OK	OK	OK	OK	OK	X	OK	Tattoo

	F3188	X	OK	OK	OK	OK	OK	OK	X	OK	F3188
	Desire HD (G10)	X	OK	OK	OK	OK	OK	OK	X	OK	Desire HD (G10)
	S710e (G11)	X	OK	OK	OK	OK	OK	OK	X	OK	S710e (G11)
	c110e	V	OK	OK	OK	OK	OK	OK	OK	OK	c110e
	Desire HD (G10)	X	OK	OK	OK	OK	OK	OK	X	OK	Desire HD (G10)
	Sensation XE (G18)	X	OK	OK	OK	OK	OK	OK	X	OK	Sensation XE (G18)
	ONE X (S720e)	X	OK	OK	OK	OK	OK	OK	X	OK	ONE X (S720e)
	Desire C (A320E)	X	OK	OK	OK	OK	OK	OK	X	OK	Desire C (A320E)
	J Z321e	X	OK	OK	OK	OK	OK	OK	X	OK	J Z321e
	ONE SV	X	OK	OK	OK	OK	OK	OK	X	OK	ONE SV
	Butterfly (X920e)	V	OK	OK	OK	OK	OK	OK	OK	OK	Butterfly (X920e)
	NEW One (801e/802e)	X	OK	OK	OK	OK	OK	OK	X	OK	NEW One (801e/802e)
	Desire 600	V	OK	OK	OK	OK	OK	OK	OK	OK	Desire 600
	Z560e (One S)	V	OK	OK	OK	OK	OK	OK	OK	OK	Z560e (One S)
Huawei											
	Ideos	X	OK	OK	OK	OK	OK	OK	X	OK	Ideos
	IDEOS U8510	V	OK	OK	OK	OK	OK	OK	OK	OK	IDEOS U8510
	MT1-U06	V	OK	OK	OK	OK	OK	OK	OK	OK	MT1-U06
I-mate / Dopod											
	700	X	OK	OK	OK	OK	OK	OK	X	OK	PDA2K
	699	X	OK	OK	OK	OK	OK	OK	X	OK	Pocket PC
	818/828/838	X	OK	OK	OK	OK	OK	OK	X	OK	
	S300	X	OK	OK	OK	OK	OK	OK	X	OK	
	P800W	X	OK	OK	OK	OK	OK	OK	X	OK	P800W
LG											
	C3380	X	X	X	X	X	X	X	X	X	C3380
	M4410	X	X	X	X	X	X	X	X	X	M4410
	KG320	X	OK	X	OK	OK	OK	OK	X	OK	KG320
	KG800	V	OK	OK	OK	OK	OK	OK	OK	OK	KG800
	KE970	X	OK	OK	OK	OK	OK	OK	X	OK	KE970
	KF600	X	OK	OK	OK	OK	OK	OK	X	OK	KF600
	KM501	X	OK	OK	OK	OK	OK	OK	X	OK	KM501
	KU250	X	OK	OK	OK	OK	OK	OK	X	OK	KU250

	KU990	X	OK	OK	OK	OK	OK	OK	X	OK	KU990
	KM380/KM380c/KM380T/KM385d/KM386c	X	OK	OK	OK	OK	OK	OK	X	OK	KM380
	KE770	X	OK	OK	OK	OK	OK	OK	X	OK	KE770
	KF350	X	OK	OK	OK	OK	OK	OK	X	OK	KF350
	KE800	X	OK	OK	OK	OK	OK	OK	X	OK	KE800
	KE820	X	OK	OK	OK	OK	OK	OK	X	OK	KE820
	KM900	X	OK	OK	OK	OK	OK	OK	X	OK	KM900
	E720	X	X	X	X	X	X	X	X	X	E720
	T515	X	OK	OK	OK	OK	OK	OK	X	OK	T515
	P970	X	OK	OK	OK	OK	OK	OK	X	OK	P970
	P705	X	OK	OK	OK	OK	OK	OK	X	OK	P705
	E400	X	OK	OK	OK	OK	OK	OK	X	OK	E400
	E975	X	OK	OK	OK	OK	OK	OK	X	OK	E975
2013/12/30	Nexus 5	V	OK	OK	OK	OK	OK	OK	OK	OK	Nexus 5
Motorola											
	V600,V500,V525, V80, E398, A630, E550, V535, V545, V550, V600i, V620	V	OK	OK	OK	OK	OK	OK	OK	OK	V600,V500,V525, V80, E398, A630, E550, V535, V545, V550, V600i, V620
	V3/V3i	V	OK	OK	OK	OK	OK	OK	OK	OK	V3
	E398	V	OK	OK	OK	OK	OK	OK	OK	OK	E398
	E680i	X	OK	OK	OK	OK	OK	OK	X	OK	E680i
	E1000	V	OK	OK	OK	OK	OK	OK	OK	OK	E1000
	V360	V	OK	OK	OK	OK	OK	OK	OK	OK	V360
	V635/V501	V	OK	OK	OK	OK	OK	OK	OK	OK	V635/V501
	A732	X	OK	OK	OK	OK	OK	OK	X	OK	A732*2
	Mpx220	X	OK	OK	OK	OK	OK	X	X	OK	Mpx220
	E770	V	OK	OK	OK	OK	OK	OK	OK	OK	E770
	L6	V	OK	OK	OK	OK	OK	OK	OK	OK	L6
	PBEL U6	V	OK	OK	OK	OK	OK	OK	OK	OK	PBEL U6
	V361	V	OK	OK	OK	OK	OK	OK	OK	OK	V361
	V501	V	OK	OK	OK	OK	OK	OK	OK	OK	V501
	明	X	X	X	X	X	X	X	X	X	明
	E6	V	OK	OK	OK	OK	OK	OK	X	OK	E6

6230i	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6230i
6670	X	OK	OK	OK	OK	OK	OK	OK	OK	OK	6670 *2
N70	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N70
6111	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6111
6270	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6270
7370	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	7370
6103	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6103
6131	X	OK	OK	OK	OK	OK	OK	X	OK	OK	6131
6280	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6280
3250	X	X	X	X	X	X	X	X	X	X	3250
N73	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N73
6233	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6233
6151/6233/6234	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6151
6288	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6288
5200	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	5200
6085	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6085
7390	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	7390
E70	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	E70
E50	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	E50
N91	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N91
E61	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	E61
N76	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N76
N61	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N61
E65	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	E65
5310	X	OK	OK	OK	OK	OK	OK	OK	X	OK	5310
3500c	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	3500c
N81	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N81
3110	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	3110
6500c	X	OK	OK	OK	OK	OK	OK	OK	X	OK	6500c
5700	X	OK	OK	X	OK	OK	OK	OK	OK	OK	5700
5300	X	OK	OK	OK	OK	OK	OK	X	OK	OK	5300
N73	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	N73
3600s	X	OK	OK	OK	OK	OK	OK	OK	X	OK	3600s
6210 Navigator	V	OK	OK	OK	OK	OK	OK	OK	OK	OK	6210 Navigator
2600c	X	OK	OK	OK	OK	OK	OK	OK	X	OK	2600c
2630	X	OK	OK	OK	OK	OK	OK	OK	X	OK	2630

	6300i	V	OK	OK	OK	OK	OK	OK	OK	OK	6300i
	6290	V	OK	OK	OK	OK	OK	OK	OK	OK	6290
	7900	X	OK	OK	OK	OK	OK	OK	X	OK	7900
	N93i	V	OK	OK	OK	OK	OK	OK	OK	OK	N93i
	E70	V	OK	OK	OK	OK	OK	OK	OK	OK	E70
	C5-00	V	OK	OK	OK	OK	OK	OK	OK	OK	C5-00
	6700S	V	OK	OK	OK	OK	OK	OK	OK	OK	6700S
	5230	V	OK	OK	OK	OK	OK	OK	OK	OK	5230
	X3-00	V	OK	OK	OK	OK	OK	OK	OK	OK	X3-00
	3710 fold	V	OK	OK	OK	OK	OK	OK	OK	OK	3710 fold
	c7	V	OK	OK	OK	OK	OK	OK	OK	OK	c7
	X3-02	X	OK	OK	OK	OK	OK	OK	X	OK	X3-02
	N8	V	OK	OK	OK	OK	OK	OK	OK	OK	N8
	7230	V	OK	OK	OK	OK	OK	OK	OK	OK	7230
	5230	V	OK	OK	OK	OK	OK	OK	OK	OK	5230
	C6-00	V	OK	OK	OK	OK	OK	OK	OK	OK	C6-00
	N97	V	OK	OK	OK	OK	OK	OK	OK	OK	N97
	Asha 311	X	OK	OK	OK	OK	OK	OK	X	OK	Asha 311
	Lumia 620	V	OK	OK	OK	OK	OK	OK	OK	OK	Lumia 620
O2											
	Zine	V	OK	OK	OK	OK	OK	OK	OK	OK	Zine
OKWAP											
	S868	X	X	X	X	X	X	X	X	X	S868
	i885	X	OK	OK	OK	OK	OK	OK	X	OK	i885
Panasonic											
	X700	X	OK	OK	OK	OK	OK	X	OK	OK	X700/X701
	X800	X	OK	OK	OK	OK	OK	X	OK	OK	X800
PANTECH											
	PG-3600v	X	X	X	X	X	X	X	X	X	PG-3600v
PHS											
	PG930	X	OK	OK	OK	OK	OK	OK	X	OK	PG930

Sagem											
	My700xi	X	X	X	X	X	X	X	X	X	My700xi
Samsung											
	SGH-E738	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E738
	SDH-500	X	OK	OK	OK	OK	OK	OK	X	OK	SDH-500
	SGH-E568	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E568
	SGH-D608	V	OK	OK	OK	OK	OK	OK	OK	OK	SGH-D608
	SGH-D528	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-D528
	SGH-E908	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E908
	SGH-D508	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-D508
	SGH-D838	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-D838
	SGH-P858	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-P858
	SGH-Z238	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-Z238
	SGH-D908	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-D908
	SGH-E908	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E908
	SGH-E378	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E378
	SGH-E848	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-E848
	SGH-Z248	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-Z248
	SGH-Z548	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-Z548
	SGH-L768/L760/L760V	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-L768
	SGH-J208/J200	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-J208
	SGH-i458B	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-i458B
	SGH-J408	X	OK	OK	OK	OK	OK	OK	X	X	SGH-J408
	SCH-F609	X	X	X	X	X	X	X	X	X	SCH-F609
	SGH-F268	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-F268
	SGH-i608	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-i608
	SGH-U808	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-U808
	SGH-F258	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-F258
	SGH-U908	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-U908
	SGH-i908	X	OK	OK	OK	OK	OK	OK	X	OK	SGH-i908
	GT-5650U	X	OK	OK	OK	OK	OK	OK	X	OK	GT-5650U

	P900	V	OK	OK	OK	OK	OK	OK	OK	OK	P900
	W550i	V	OK	OK	OK	OK	OK	OK	OK	OK	W550i
	W520i	V	OK	OK	OK	OK	OK	OK	OK	OK	W520i
	K800i	X	X	X	X	X	X	X	X	X	K800i*6
	W800c	X	X	X	X	X	X	X	X	X	W800c*6
	K750i/K750c	X	X	X	X	X	X	X	X	X	K750i/K750c*6
	D750	X	X	X	X	X	X	X	X	X	D750*6
	Z800i/Z800c	X	X	X	X	X	X	X	X	X	Z800i/Z800c*6
	Z550i	X	OK	OK	OK	OK	OK	OK	X	OK	Z550i
	W710i	X	OK	OK	OK	OK	OK	OK	X	OK	W710i
	W850i/W850xx	X	OK	OK	OK	OK	OK	OK	X	OK	W850i
	Z610i	X	OK	OK	OK	OK	OK	OK	X	OK	Z610i
	Z710i	X	OK	OK	OK	OK	OK	OK	X	OK	Z710i
	Z610i	X	OK	OK	OK	OK	OK	OK	X	OK	Z610i
	Z558i	X	OK	OK	OK	OK	OK	OK	X	OK	Z558i
	W700i/W700c	X	X	X	X	X	X	X	X	X	W700i/W700c*6
	W810i	X	OK	OK	OK	OK	OK	OK	X	OK	W810i
	K510i	X	OK	OK	OK	OK	OK	OK	X	OK	K510i
	K550im	X	OK	OK	OK	OK	OK	OK	X	OK	K550im
	K610i	V	OK	OK	OK	OK	OK	OK	OK	OK	K610i
	K608i	X	OK	OK	OK	OK	OK	OK	X	OK	K608i
	W660i	X	OK	OK	OK	OK	OK	OK	X	OK	W660i
	S500i	X	X	X	X	X	X	X	X	X	S500i
	K850i/K850a/K858c	X	OK	OK	OK	OK	OK	OK	X	OK	K850i
	P1i	V	OK	OK	OK	OK	OK	OK	OK	OK	P1i
	K660i	X	OK	OK	OK	OK	OK	OK	X	OK	K660i
	Z555	X	OK	OK	OK	OK	OK	OK	X	OK	Z555
	W380i	X	OK	OK	OK	OK	OK	OK	X	OK	W380i
	T303	X	OK	OK	OK	OK	OK	OK	X	OK	T303
	R306	X	X	X	X	X	X	X	X	X	R306*7
	G700	V	OK	OK	OK	OK	OK	OK	OK	OK	G70
	G502	X	OK	OK	OK	OK	OK	OK	X	OK	G502
	C902	X	OK	OK	OK	OK	OK	OK	X	OK	C902
	C702	X	OK	OK	OK	OK	OK	OK	X	OK	C702
	T700	X	OK	OK	OK	OK	OK	OK	X	OK	T700
	T707	X	OK	OK	OK	OK	OK	OK	X	OK	T707

	W980	X	OK	OK	OK	OK	OK	OK	X	OK	W980
	Z750i/Z750a	X	OK	OK	OK	OK	OK	OK	X	OK	Z750i/Z750a
	W902	X	OK	OK	OK	OK	OK	OK	X	OK	W902
	W595	X	OK	OK	OK	OK	OK	OK	X	OK	W595
	W395	X	OK	OK	OK	OK	OK	OK	X	OK	W395
	J10i2	X	OK	OK	OK	OK	OK	OK	X	OK	J10i2
	Xperia X8	X	OK	OK	OK	OK	OK	OK	X	OK	Xperia X8
	Xperia Neo	V	OK	OK	OK	OK	OK	OK	OK	OK	Xperia Neo
	Xperia Ray	V	OK	OK	OK	OK	OK	OK	OK	OK	Xperia Ray
	K810i	X	OK	OK	OK	OK	OK	OK	X	OK	K810i
	Xperia S	V	OK	OK	OK	OK	OK	OK	OK	OK	Xperia S
	MT27i	V	OK	OK	OK	OK	OK	OK	OK	OK	MT27i
	Xperia Z(L36H)	V	OK	OK	OK	OK	OK	OK	OK	OK	Xperia Z(L36H)
	Xperia L	V	OK	OK	OK	OK	OK	OK	OK	OK	Xperia L
SOWA											
	D258-Plus	X	OK	OK	OK	OK	OK	X	X	OK	D258-Plus
TaiwanMobile											
	T2	X	OK	OK	OK	OK	OK	OK	X	OK	T2
vodafone											
	1210	X	OK	OK	OK	OK	OK	OK	X	OK	1210
Viewsonic											
	VPAD7	V	OK	OK	OK	OK	OK	OK	OK	OK	VPAD7
ZIKOM											
	Z-950	X	OK	OK	OK	OK	OK	X	X	OK	Z-950
Xiaomi											
	小米機2S	V	OK	OK	OK	OK	OK	OK	OK	OK	OK

備註：

*1：手機端藍芽設定須設定為進階模式，才可使用方向盤Switch 或 遙控撥號功能。

- *2：Nokia7600/7610/6820/6230/6260/6670 使用東信/台灣大哥大 SIM卡，通話結束時由發話方掛話，會造成按鍵都無作用或音響沒有回復，Moto A732使用中華電信SIM卡亦會有此問題。
(此乃手機端系統與電信業者溝通問題). 必須由手機端撥打一通0800080090，然後由手機端掛話，音響才會正常回復.
- *3：Call out 時，聲音預設在手機端，必須由手機端操作聲音轉至藍芽端，聲音才會轉至免持聽筒端，此乃手機端系統設計緣故.
- *4：手機當機率高.
- *5：BQB認證為藍芽SIG協會對藍芽產品的相容性認證，同一系列廠牌之手機通過認證代表其藍芽功能相容.
- *6：來電時，手機會當機，當通訊錄中建繁體字3個字的.
- *7：來電時，接聽掛話皆NG(DVD&FM MODE)

X：完全不支援.

X1：手機不支援該項功能.

X2：手機傳送空白或錯誤 CallerId.

更新日期：2013/12/30

完全不支援

偶發狀況無法轉藍芽免持功能，此乃手機問題，測試他廠 Car Kit 亦有同樣情形.